


# Model No.: ND-6000N

## Replacing Ribbon Cassette

1. Open the lid. Note: Change ribbon when the power is on.

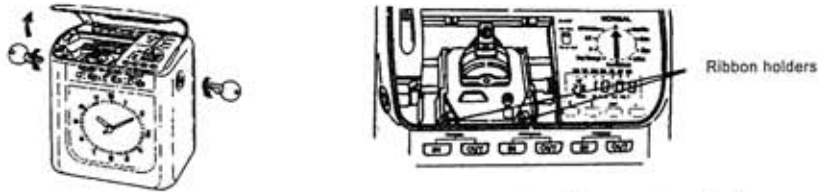


Insert the keys into the keyholes on both sides of the case, turn the keys in the direction indicated in the figure above, and open the lid.

2. Remove the cassette.



As shown in the figure above, pull the ribbon holders towards you and, holding them steady in that position, use the handle to out the cassette.


3. Insert a new cassette.

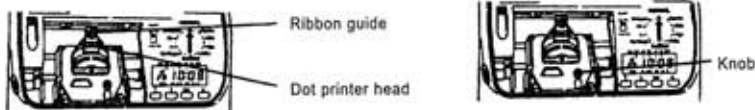

Correctly insert a new cassette between the ribbon guide and the dot printer head.

Push the cassette head until it clicks into place. Turn the knob clockwise to remove any slackness in the ribbon.


4. Close the lid.

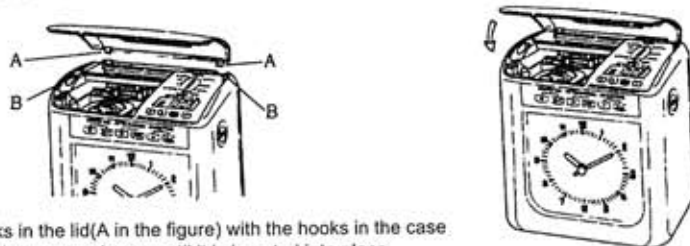

Connect the hooks in the lid (A in the figure) with the hooks in the case (B). Bring the lid down towards you until it is inserted into place.

## 色帶更換

1. 打開盒蓋 注意：在電源接通狀態下更換色帶。

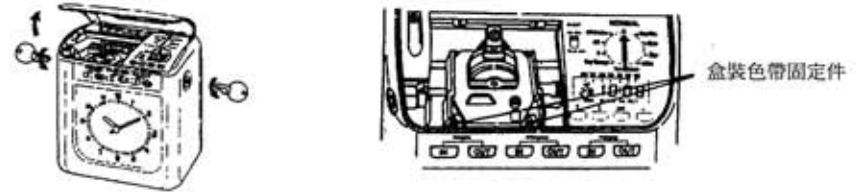


將鎖匙插入外殼兩側的鎖匙孔中，按圖示方向旋轉鎖匙即可打開盒蓋。

2. 取出盒裝色帶



按圖示方法按住把手，取出色帶盒。


3. 裝入新的盒裝色帶

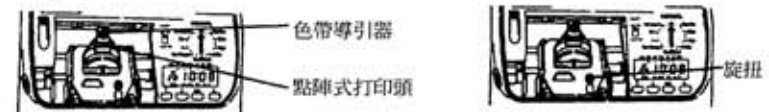

將色帶盒正確地插在色帶導引器與點陣式打印頭之間。

按壓色帶盒的上部，將其推入盒座，然後按順時針方向旋轉旋扭拉緊色帶。

4. 關閉盒蓋

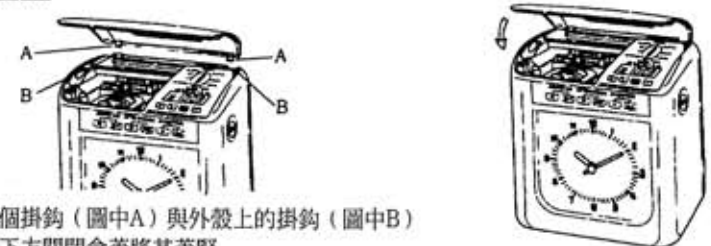

將盒蓋上的兩個掛鉤（圖中A）與外殼上的掛鉤（圖中B）相連接，向前下方關閉盒蓋將其蓋緊。