



# Model No.: TIMMY-6

## Replacing Ribbon Cassette

Press down the two side log in the LCD display cover (Fig. a), open the lid and fix it into the In/Out case (Fig. b), remove the cassette and insert a new cassette (Fig.c), close the lid when finished.

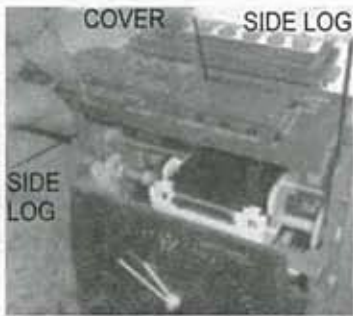

(Fig. a)

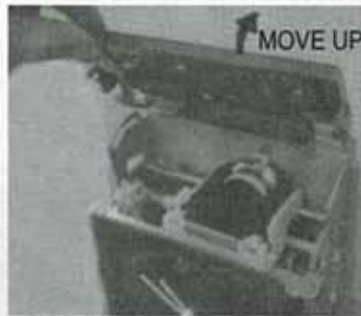

(Fig. b)



(Fig. c)