

Model No.: QR-52N,QR-52SN,QR-52AN

INK RIBBON CASSETTE — REPLACEMENT OF THE INK RIBBON CASSETTE.

- ① Unlock and release shaft (1) towards the right.
 - ② Open the display block by pulling and turning its left-hand side toward you.
 - ③ Press leaf spring (3) on the right-hand side of printing block (2) toward the printing block side and disengage knob (5) of ribbon cassette (4) from the leaf spring by slightly pushing the knob toward the right. Then, raise the innermost side of the ribbon cassette.
 - ④ As shown in Fig.9.2 remove the old cassette from holder (6) and install a new one.
 - ⑤ Tighten the ribbon by turning take-up knob (7) and adjust the ribbon until it comes between the printing wheel and printing head (8) and the cassette is engaged with ribbon feed gear (9).
- If the cassette cannot be engaged with ribbon feed gear (9) slightly turn take-up knob (7) until the cassette is engaged with the gear.
- ⑥ Return the printing block to the original position, insert the shaft and return the display unit to the original position.

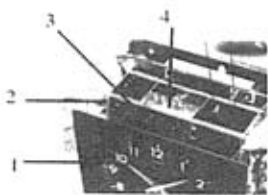


Fig.9.1



Fig.9.2

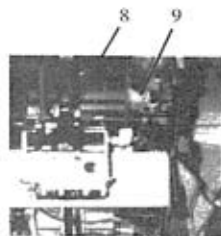


Fig.9.3